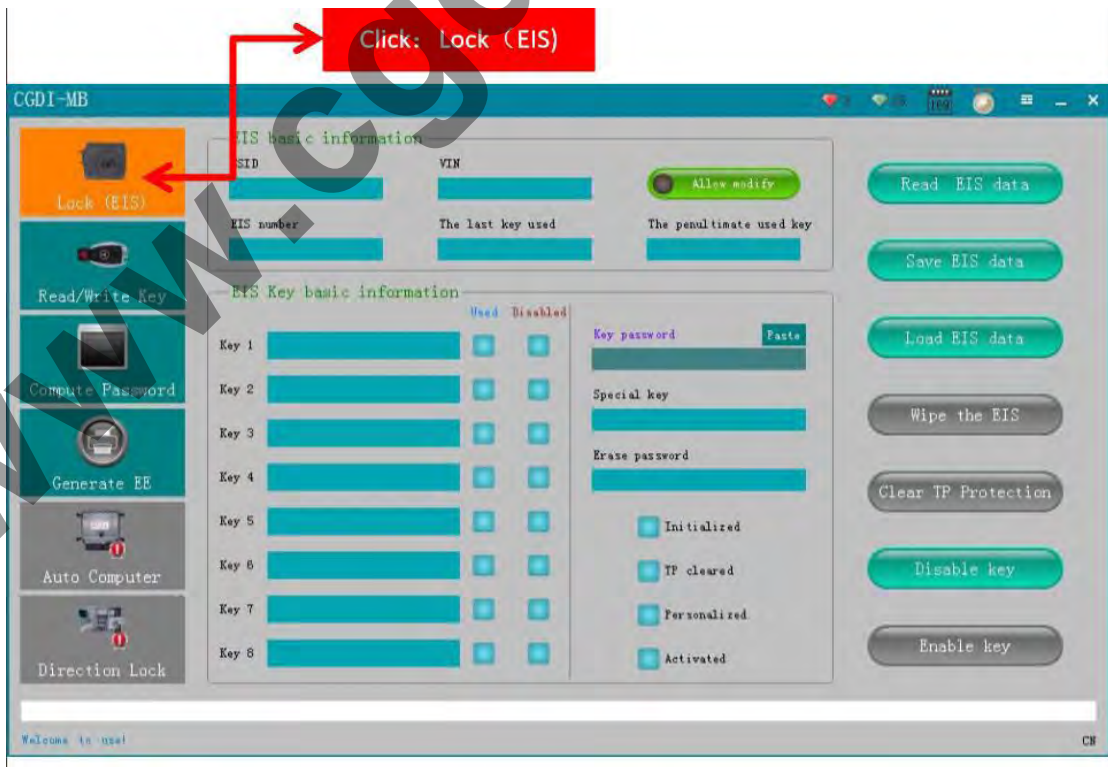# User Manual for CGDI Pro MB car key add

Topic: Step-by-step procedure on how to use **CGDI Prog MB** to add Mercedes Benz car key.
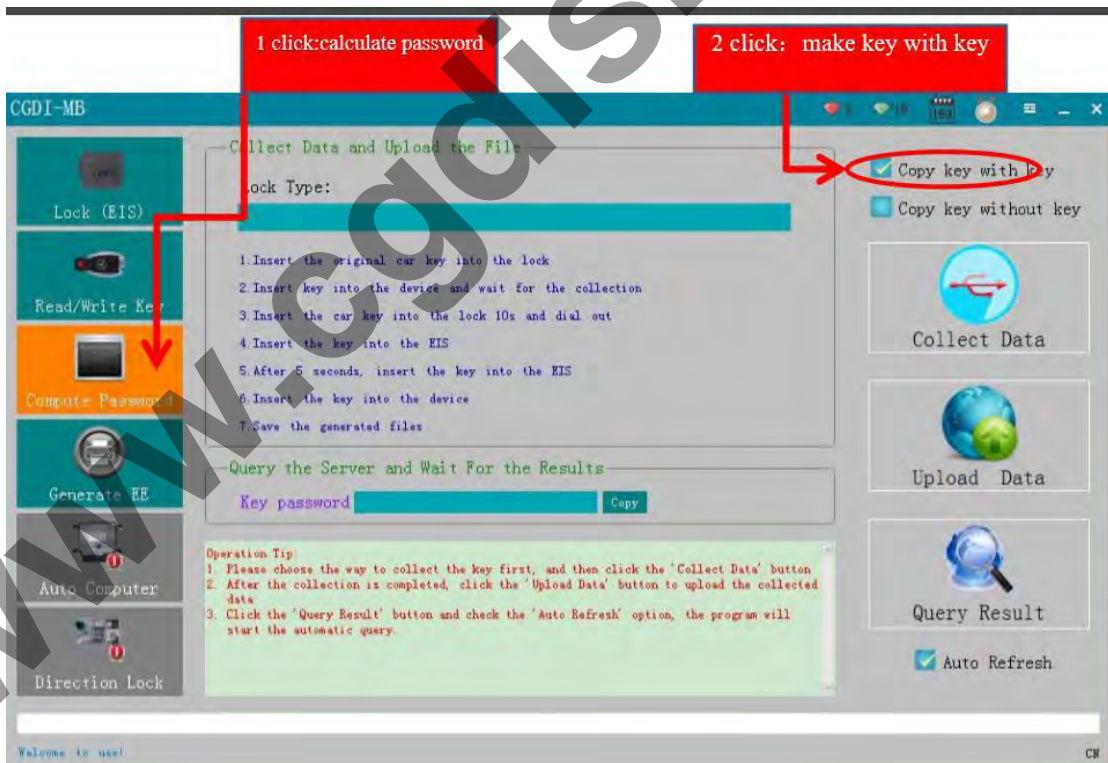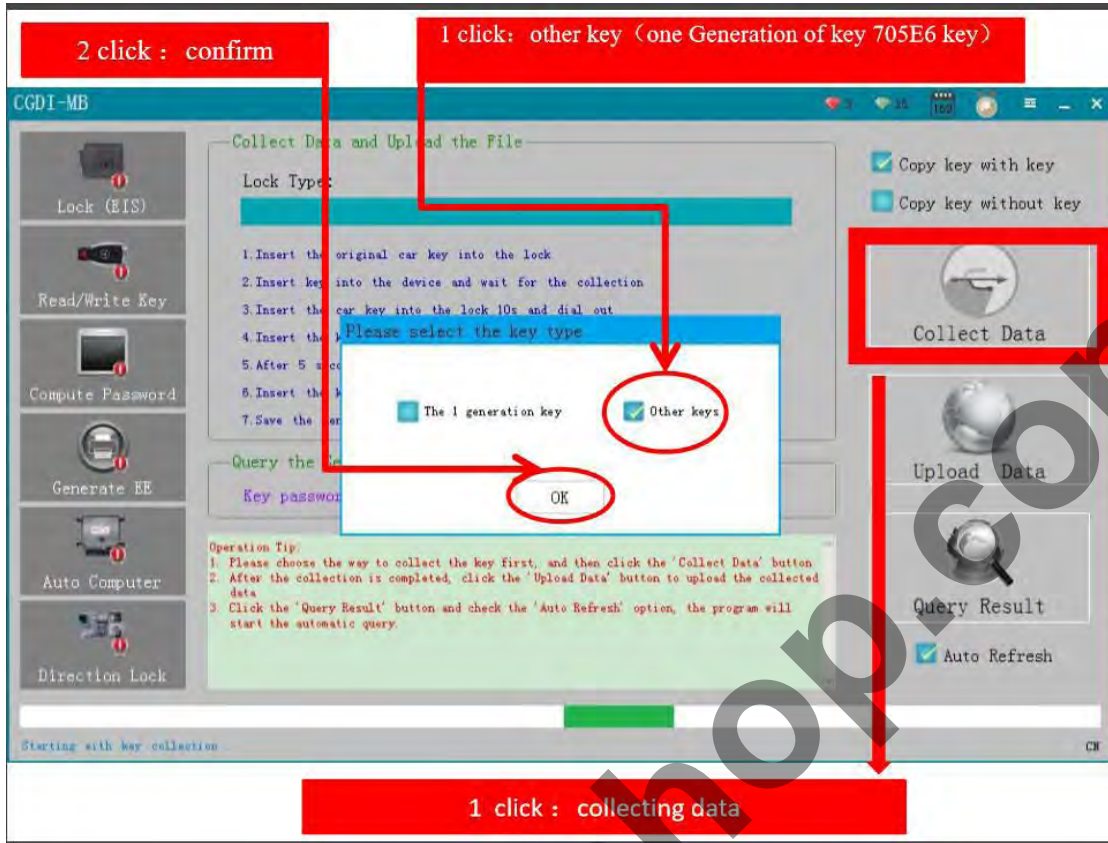

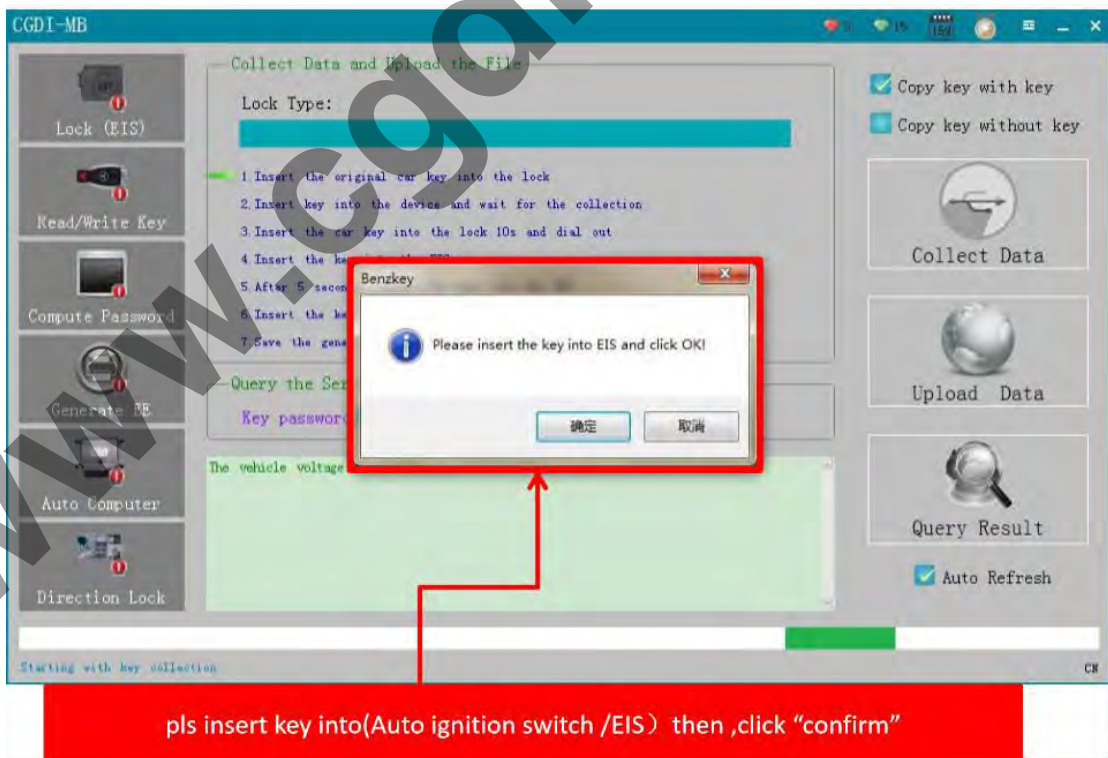Step 1: Click on "Lock (EIS)

Step 2: Click on "Read EIS data"

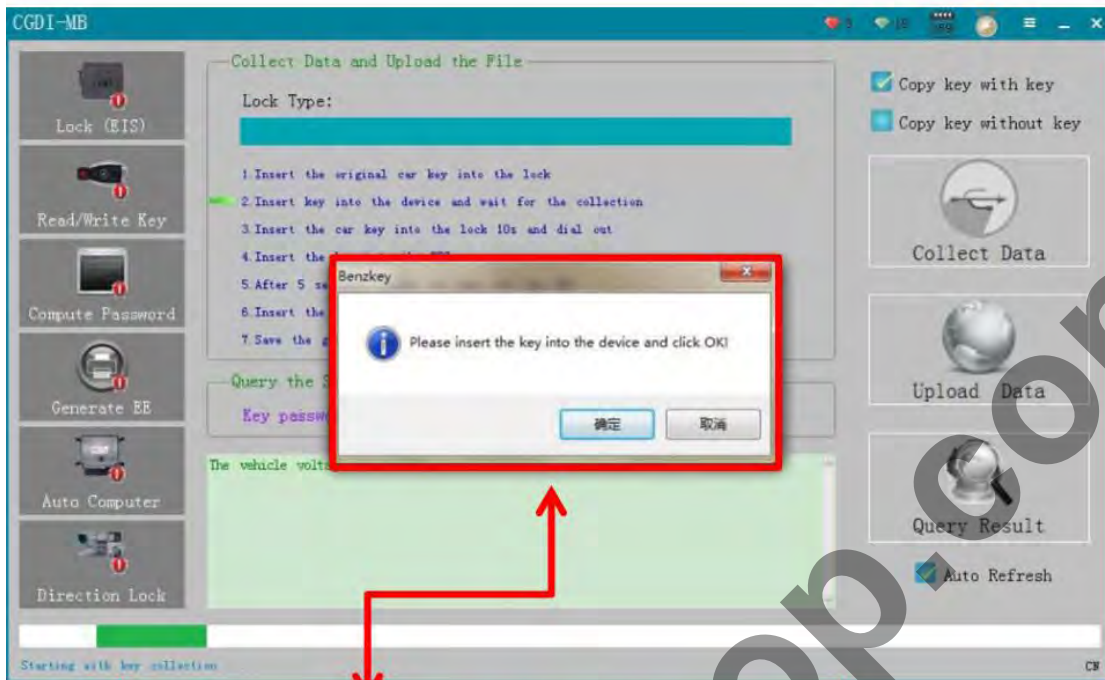Step 3: Click on "Computer Password", then click on **"Copy key with key"**

Step 4: Click on "Other Keys" (One generation of key 705E6 key), then click on "OK".
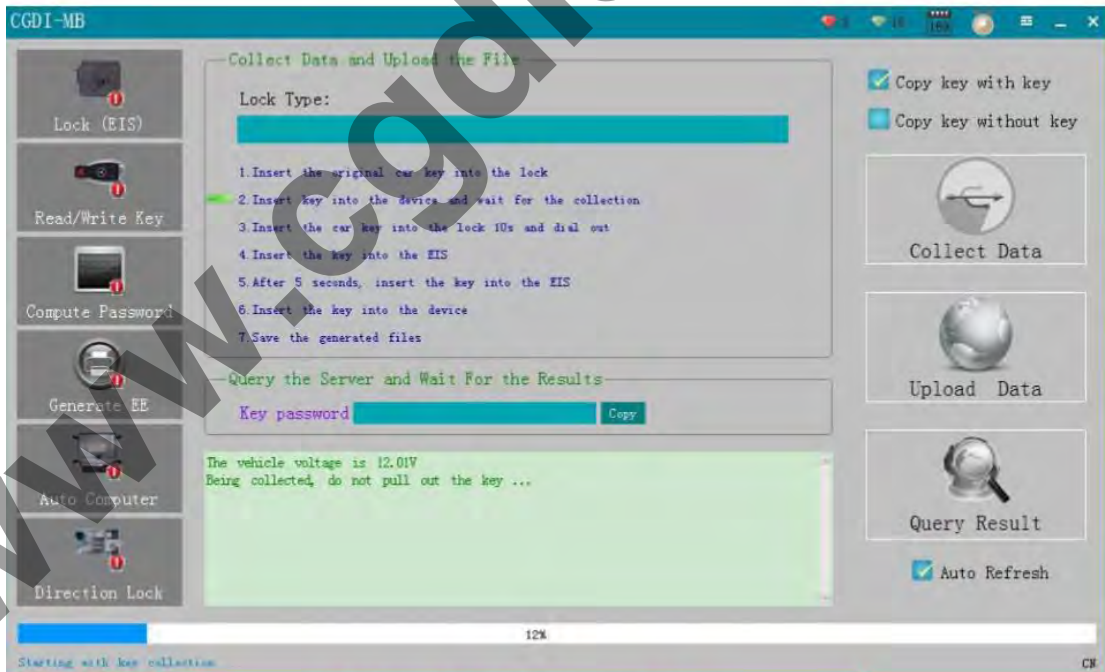
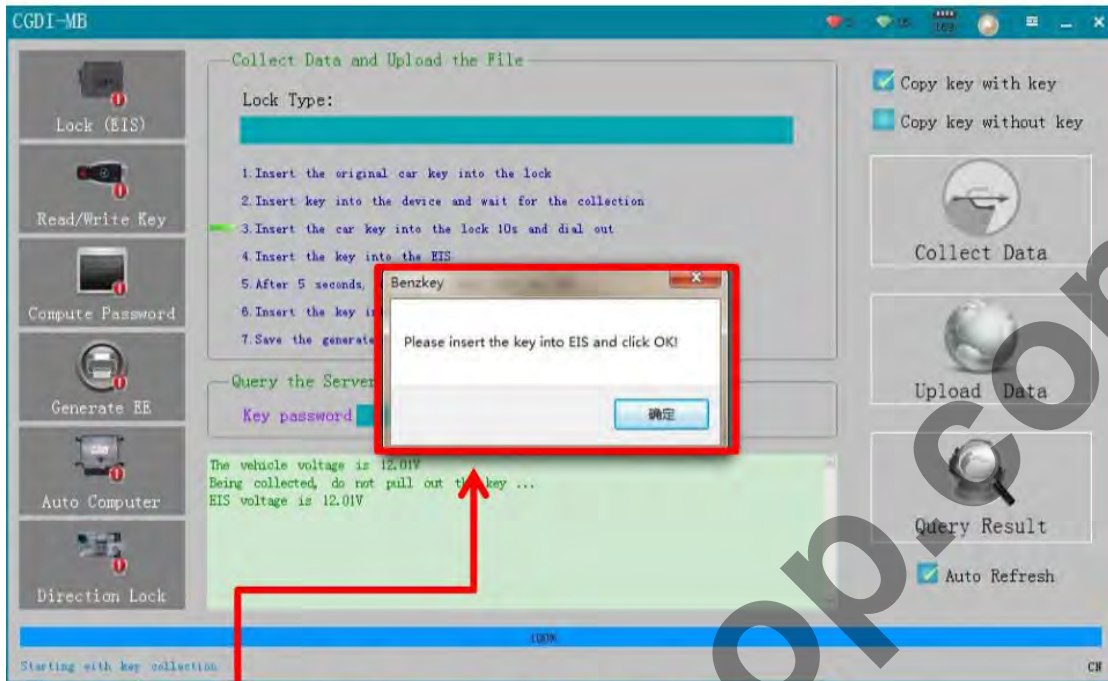Step 5: Please insert the key into EIS and click OK.

Step 6: Please insert the key into the device and click on OK!

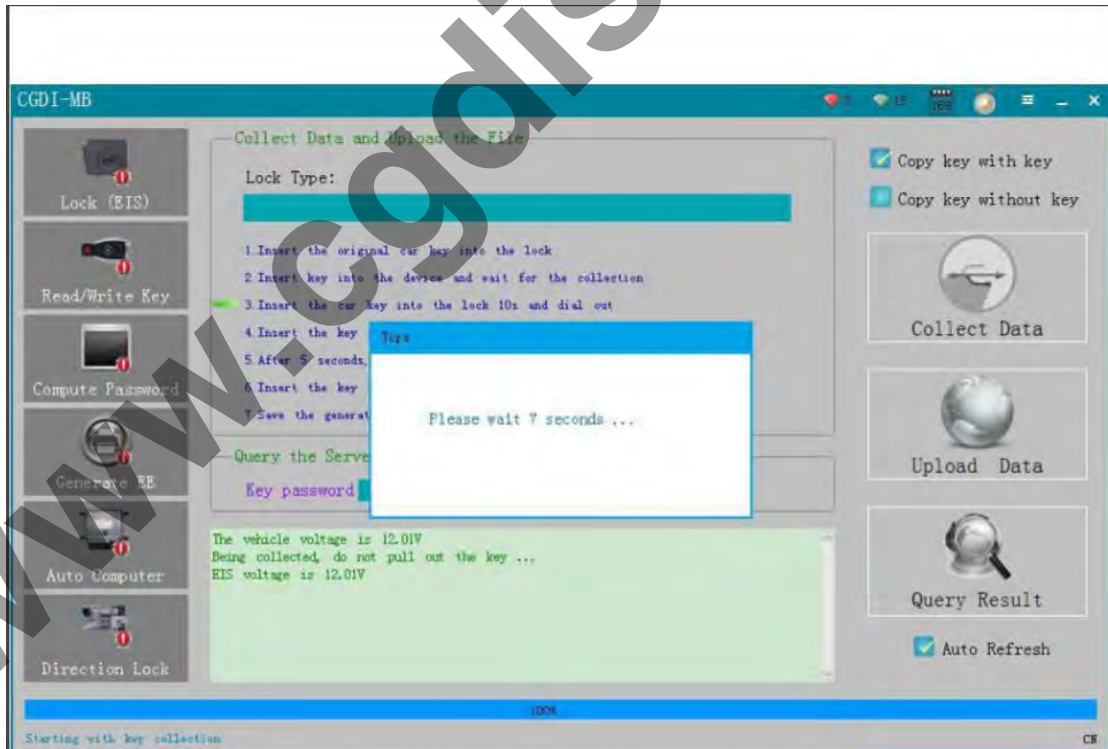Step 7: Collecting the data, do not remove the key.
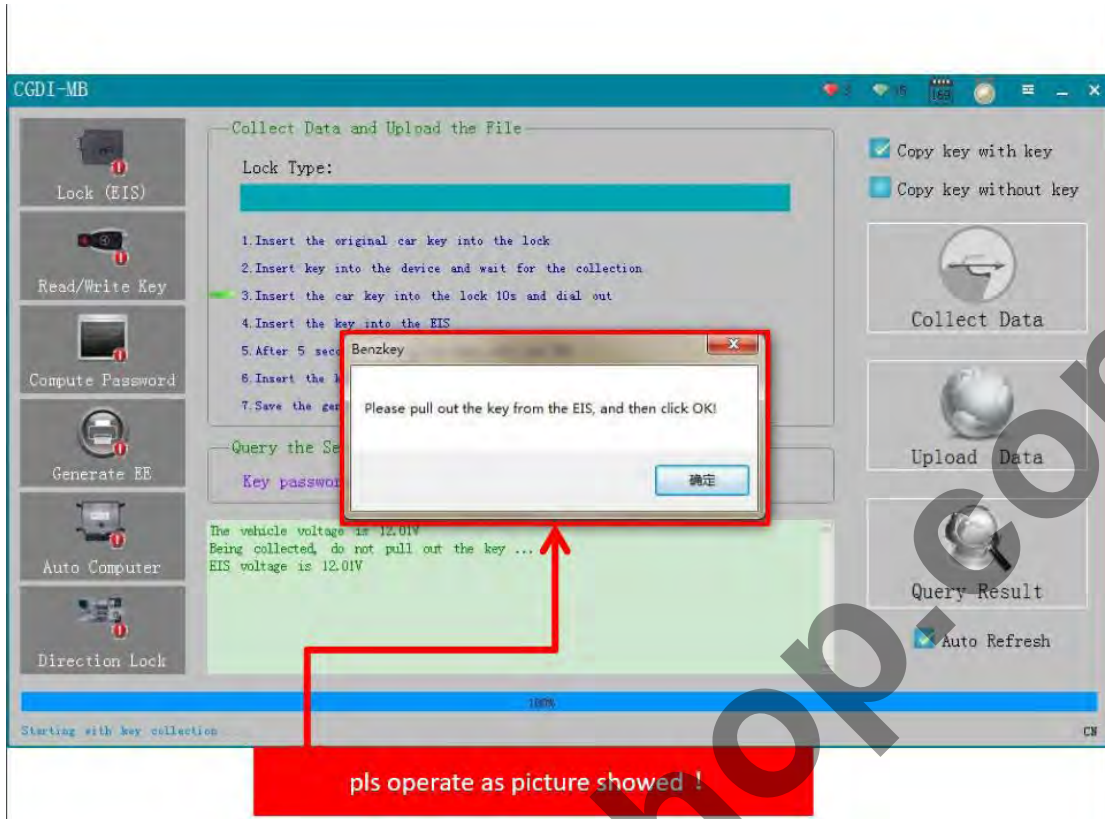

Step 8: Please insert the key into EIS and click OK.

Step 9: Please wait for 7 seconds.

Step 10: Please pull out the key from the EIS, and then click OK!

Step 11: Please insert the key into the EIS again and click OK!

Src: